



Part # 01-067

Genesis 250/300

Trailer Hitch

(Universal)

ITEMS INCLUDED

Receiver Bracket
Ball Mount
Pin + Clip
2 - 10mm x 30mm hex head bolts

TOOLS NEEDED

17mm socket
17mm wrench
Ratchet



MadJax® recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your bodywork. The MadJax® Limited Warranty only covers defects in materials and workmanship, and does not cover damage due to improper installation. If you are having difficulty installing this product, contact your Authorized MadJax® Dealer.


STEP 1

Using a 17mm socket and wrench, remove nut from "tow mode" bolt, and back out bolt until it is flush with frame. Repeat on opposite side.




STEP 2

Slide receiver bracket between footrest frame. Align bracket holes highlighted in picture

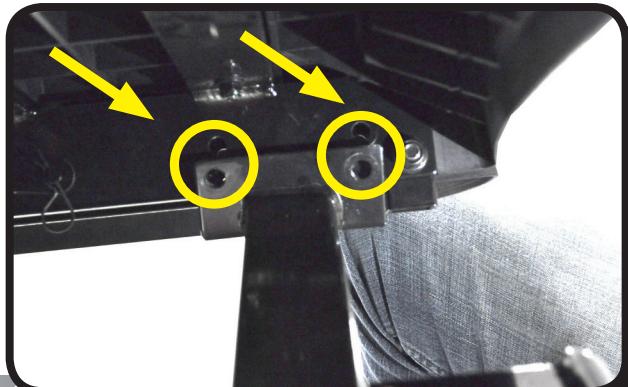

STEP 3

Using footrest frame bolts from Step 1 and supplied 10x30mm bolts, attach receiver bracket to footrest. Once all 4 bolts are in place, tighten hardware with 17mm wrench and socket.

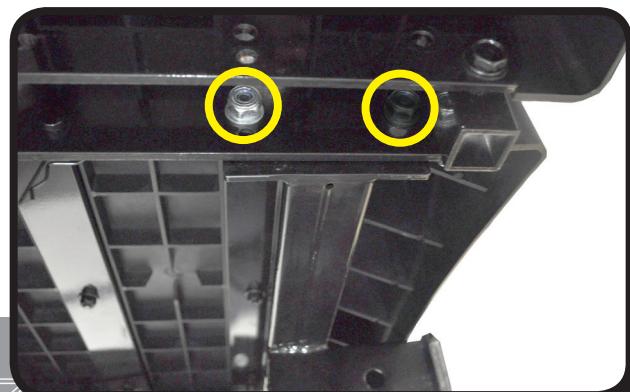

STEP 4

Attach ball mount into receiver using supplied pin and clip.



INSTALLATION COMPLETE