



## Part # 01-075 Trailer Hitch

(Club Car® Precedent®)



### ITEMS INCLUDED

2" Receiver  
Ball Mount  
Hardware Pack  
Pin & Clip

4 - Hex Head Bolts  
8 - Flat Washers  
4 - 8mm Lock Nuts

### TOOLS NEEDED


Cordless Impact  
13mm Socket  
13mm Wrench  
T40 Torx Bit



*MadJax® recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your bodywork. The MadJax® Limited Warranty only covers defects in materials and workmanship, and does not cover damage due to improper installation. If you are having difficulty installing this product, contact your Authorized MadJax® Dealer.*

### STEP 1

Detach factory towing bracket by removing four factory bolts using a T40 torx bit. Do not detain.

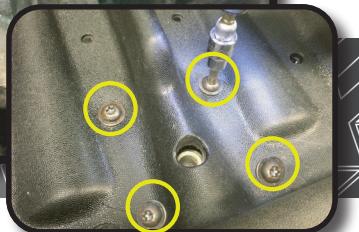

### STEP 2

Place 8mm x 75mm bolts into the four factory holes in the bagwell as shown.



## STEP 3

Hold receiver in place, and secure with flat washers and lock nuts as shown. Hand tighten hardware.



## STEP 4

Using 13mm wrench and socket, tighten all hardware.



## STEP 5

Place ball mount into receiver and secure with hitch pin and clip provided.



## INSTALLATION COMPLETE

Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. ("Ingersoll Rand"). Reference to Club Car®, Club Car® Precedent®, or Club Car® DS® or any of Ingersoll Rand's trademarks, word marks, or products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by Ingersoll Rand or any of its subsidiary companies.