



Part # 01-078
Genesis 250/300
Footstep
(Universal)



ITEMS INCLUDED

Footstep
2 - 8mm x 25mm hex head bolts
4 - 8mm flat washers
2 - 8mm lock nuts

TOOLS NEEDED


13mm socket
13mm wrench
Ratchet



MadJax® recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your bodywork. The MadJax® Limited Warranty only covers defects in materials and workmanship, and does not cover damage due to improper installation. If you are having difficulty installing this product, contact your Authorized MadJax® Dealer.

STEP 1

Locate the two pre-drilled holes in the frame of your Genesis 250/300 foot rest as shown.

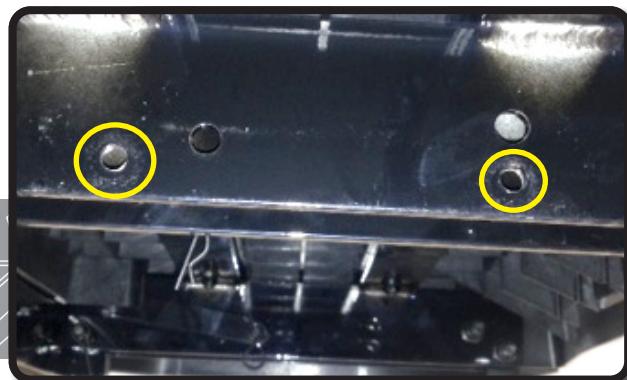

STEP 2

Using supplied hardware, attach footstep to foot rest frame using 13mm socket and wrench.



INSTALLATION COMPLETE

Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. ("Ingersoll Rand"). Reference to Club Car®, Club Car® Precedent®, or Club Car® DS® or any of Ingersoll Rand's trademarks, word marks, or products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by Ingersoll Rand or any of its subsidiary companies.