



Part # 03-035 Convex Mirror

(Club Car® Precedent®)



ITEMS INCLUDED

Bracket
Mirror
Hardware

TOOLS NEEDED

Drill
#2 Phillips head screwdriver
10mm Socket
10mm Wrench



MadJax® recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your bodywork. The MadJax® Limited Warranty only covers defects in materials and workmanship, and does not cover damage due to improper installation. If you are having difficulty installing this product, contact your Authorized MadJax® Dealer.

STEP 1

Find desired location on cart, and mark with pen.



STEP 2

For E-Z-GO® TXT®/RXV®, remove roof and retain factory hardware.

Skip to Step 5 for other vehicle applications.



STEP 3

Drill holes as shown.



STEP 4

Use self-tapping screws to attach the bracket as shown.



STEP 5


For Club Car® Precedent®, drill holes into canopy as shown.
Use provided hardware to attach bracket.




For Club Car® DS®, drill holes into canopy as shown.
Use provided hardware to attach bracket.



For Yamaha® Drive®, drill holes into canopy as shown.
Use provided hardware to attach bracket.

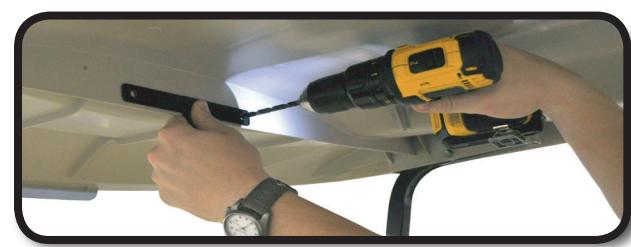

For Yamaha® G-SERIES®, drill holes into canopy as shown.
Use provided hardware to attach bracket.

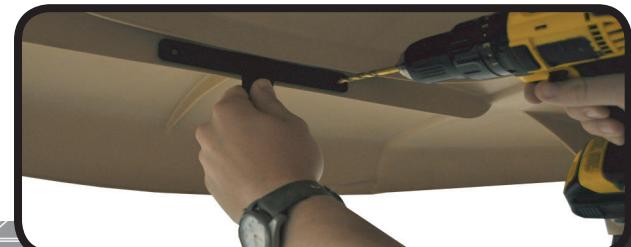

STEP 6

Loosen screws on back of mirror.



STEP 7

Attach mirror to bracket as shown, and tighten screws on back of mirror.



STEP 8

For E-Z-GO® TXT®/RXV®, reattach roof with retained hardware from Step 2.



INSTALLATION COMPLETE