MADJAX ASCENT

Installation Instructions for Cooler Assembly (#03-340)

Contents:
Coolers (2)
Sand Bottles (2)
Driver Side Mounting Bracket (1)
Passenger Side Mounting Bracket (1)
M8x70 Bolts (4)
M8 Flat Washers (8)
M8 Lock Nuts (4)

Tools Needed:
Electric Drill
11/32" Drill Bit
16mm Wrench
1/2" Wrench
6mm Allen Head



CAUTION** – There is wiring inside the Driver and Passenger rear strut. Be extremely careful to not damage the wiring when drilling holes. **PROFESSIONAL INSTALLATION IS RECOMMENDED.


STEP 1

Uninstall the second row seat back assembly by removing the (6) six bolts shown. Use a 16mm wrench and 6mm allen head to remove the (2) two bolts securing the seat belts, and a 1/2" wrench and 6mm allen head to remove the (4) four bolts securing the seat assembly to the rear struts. Retain hardware for reinstallation and place seat assembly aside.




STEP 2

On the driver side, use a 11/32” drill bit to drill matching holes on the rear strut and install the driver’s side cooler bracket by using M8*70 bolts with (2) two M8 flat washers and (1) one M8 lock nut. Repeat on the passenger side with passenger side bracket.

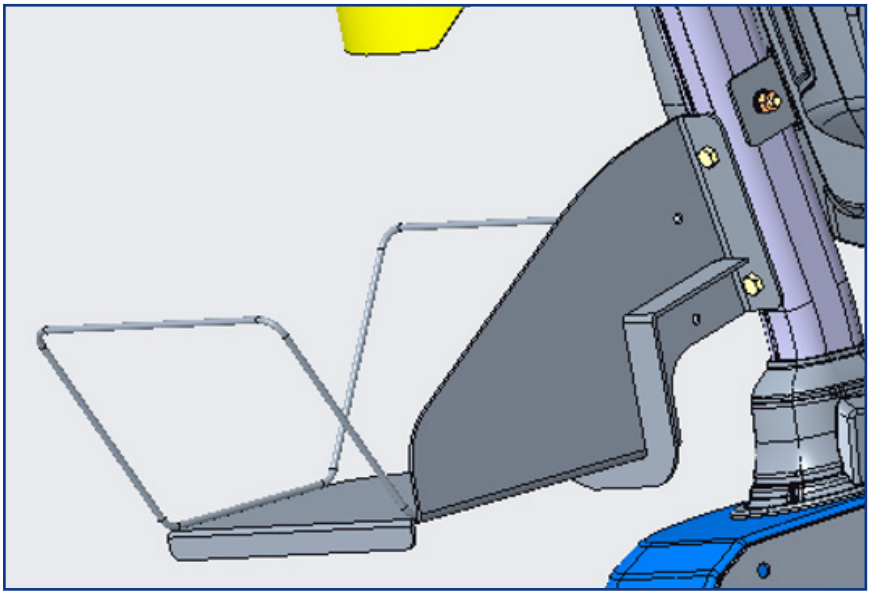

STEP 3

Place the sand bottles and the coolers into the respective brackets.

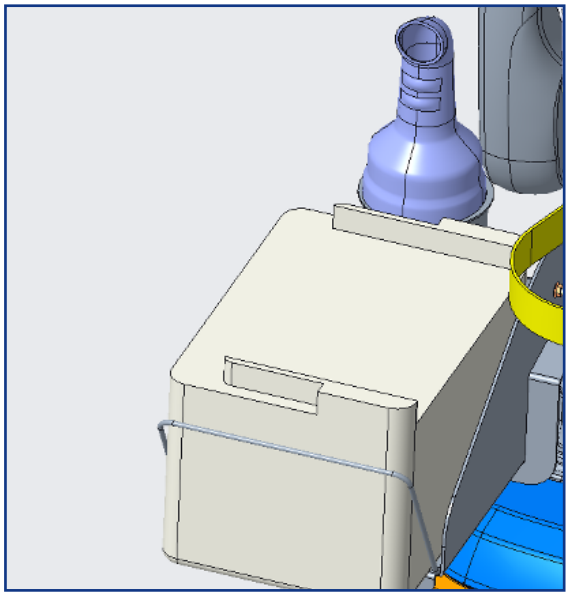

STEP 4

Reinstall the second row seat back assembly using retained hardware.



INSTALLATION COMPLETE