
MADJAX ASCENT

Trailer Hitch Installation Instructions (#03-341)

Contents:
Hitch Receiver
Ball Mount
Hardware Pack
- M10x30 Bolts (4)
- Lock Washers (4)
- Flat Washers (4)

Tools Needed:
3/8 Ratchet
16mm Socket
Crescent Wrench
Adjustable Wrench

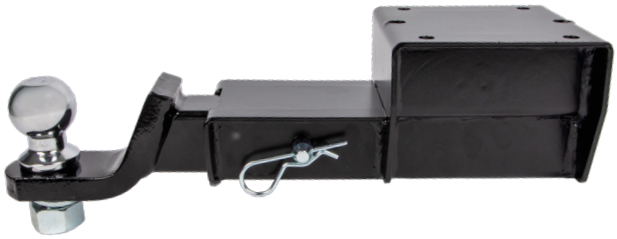

SAFETY PRECAUTIONS – Park cart on level ground. Turn the key OFF.


STEP 1


Remove the four (4) bolts from the hardware pack. Slide one lock washer onto each bolt. After the lock washer, slide one flat washer onto each bolt.



STEP 2

Position the hitch receiver under the cart, aligning it with the four (4) holes in the bottom-center of the cart.

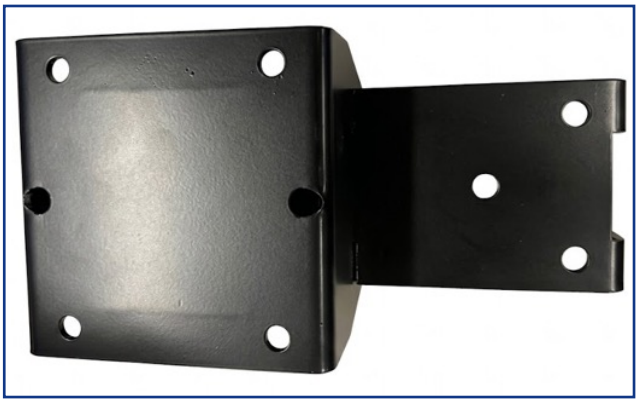

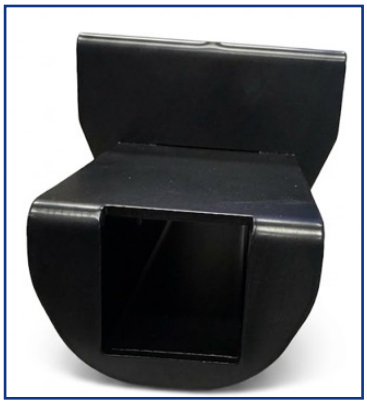



STEP 3

Hand-tighten each bolt (with both washers attached) into the holes until they catch.






STEP 4

Fully tighten each bolt using a ratchet with 16mm socket.



STEP 5

Remove the pin and clip from the ball mount piece.

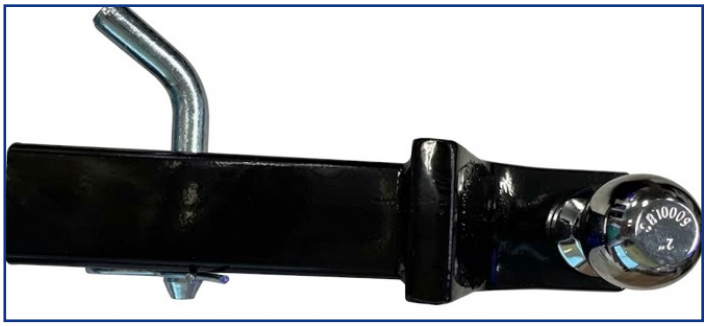




STEP 6

Insert the ball mount into the hitch receiver.




STEP 7

Align the hitch receiver with the hole in the ball mount. Slide the pin through the receiver hitch and ball mount. Insert the clip into the end of the pin to secure in place.

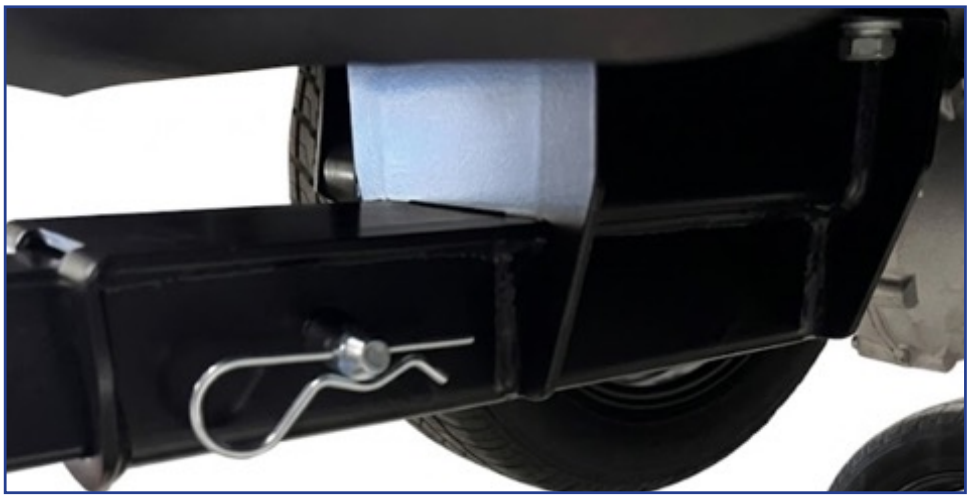

STEP 8

Hold the ball mount with the adjustable wrench. Tighten the lug nut on the bottom of the ball mount using the crescent wrench.

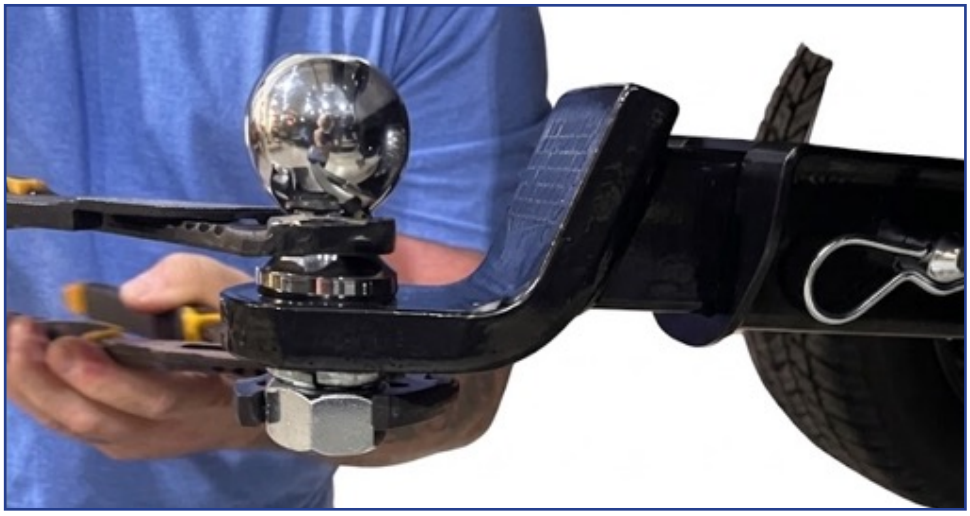

Final Inspection

Verify all the receiver hitch and ball mount bolts are tight.

INSTALLATION COMPLETE