

14-003 SIDE STEP BRACKETS INSTALLATION INSTRUCTIONS

WILL FIT YAMAHA® DRIVE2®



Brackets

HARDWARE INCLUDED

- (2) Square U-Bolts M10 x 40mm x 104mm
- (1) Square U-Bolt M10 x 68mm x 110mm
- (1) Square U-Bolt M10 x 58mm x 110mm
- (8) 10mm x 55mm Hex Bolts
- (24) 10mm Flat Washers
- (16) 10mm Lock Nuts

TOOLS NEEDED


- 17mm Socket
- 17mm Wrench

WARNING: WE RECOMMEND PROFESSIONAL INSTALLATION. IF YOU CHOOSE TO NOT HAVE THIS PRODUCT INSTALLED BY A PROFESSIONAL, WE HIGHLY RECOMMEND THAT YOU EXERCISE CAUTION, CARE, AND PATIENCE WHEN INSTALLING THIS PRODUCT.

STEP 1:

- Place smaller U-Bolt (10mm x 40mm) over front of frame as shown.
- Place larger U-Bolt over frame located directly under the front of the battery well.

A - FRONT U-BOLT

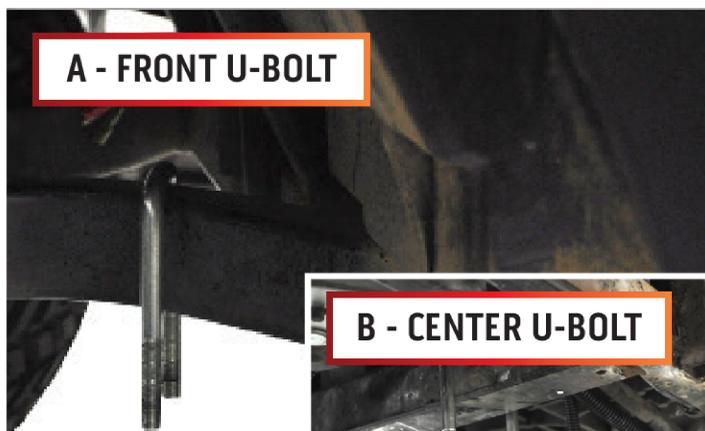

B - CENTER U-BOLT



STEP 2:

Place bracket under frame with the tab in picture hooked to top of frame directly behind pedal box.

