

14-006 SIDE STEP BRACKETS INSTALLATION INSTRUCTIONS

WILL FIT E-Z-GO® TXT®



Brackets

HARDWARE INCLUDED

- (4) M20 X 40mm Hex Head Bolts
- (8) M20 Flat Washers
- (4) M20 Lock Nuts

TOOLS NEEDED


- 30mm Socket
- Adjustable Wrench
- 1/2" Drive Ratchet
- 13mm Socket
- 13mm Wrench

WARNING: WE RECOMMEND PROFESSIONAL INSTALLATION. IF YOU CHOOSE TO NOT HAVE THIS PRODUCT INSTALLED BY A PROFESSIONAL, WE HIGHLY RECOMMEND THAT YOU EXERCISE CAUTION, CARE, AND PATIENCE WHEN INSTALLING THIS PRODUCT.

STEP 1:

Place bracket to frame as shown. Be sure to move any wire harness to outer side of slotted hole in frame. Square tabs of mounting bracket should fit tightly into corners of frame.

Note: Side step mounting locations should be on outside of bracket.

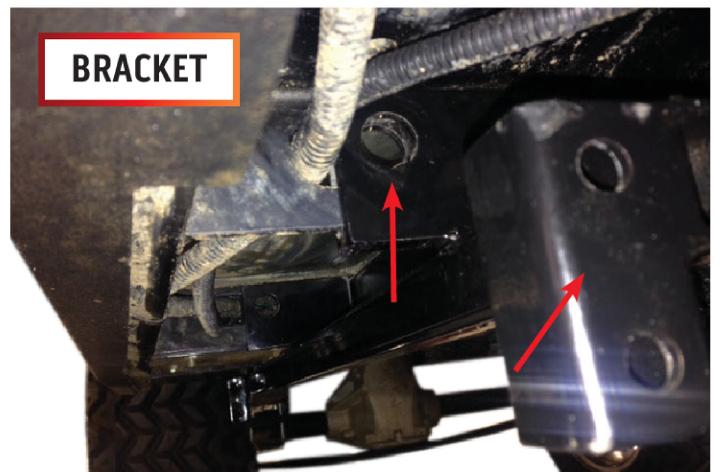

STEP 2:

Secure bracket in both mounting locations using 20mm hardware provided. Tighten bracket hardware.



BRACKET INSTALLATION COMPLETE