


14-007 SIDE STEP BRACKETS INSTALLATION INSTRUCTIONS

WILL FIT E-Z-GO® RXV®

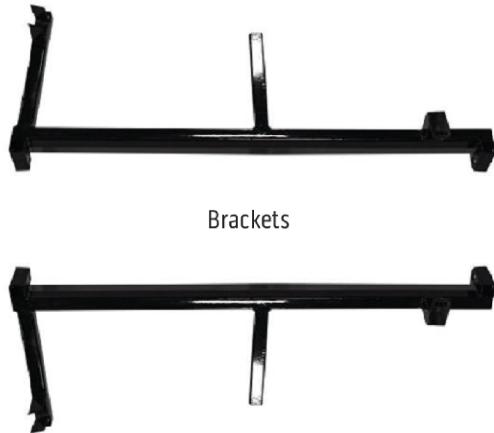

HARDWARE INCLUDED

- (2) M10 U-Bolt 71mm x 117mm
- (6) M10 Flat Washers
- (6) M10 Lock Nuts


TOOLS NEEDED

- 17mm Socket
- 17mm Wrench

WARNING: WE RECOMMEND PROFESSIONAL INSTALLATION. IF YOU CHOOSE TO NOT HAVE THIS PRODUCT INSTALLED BY A PROFESSIONAL, WE HIGHLY RECOMMEND THAT YOU EXERCISE CAUTION, CARE, AND PATIENCE WHEN INSTALLING THIS PRODUCT.

STEP 1:

To begin, place supplied U-Bolt over front of frame as shown.

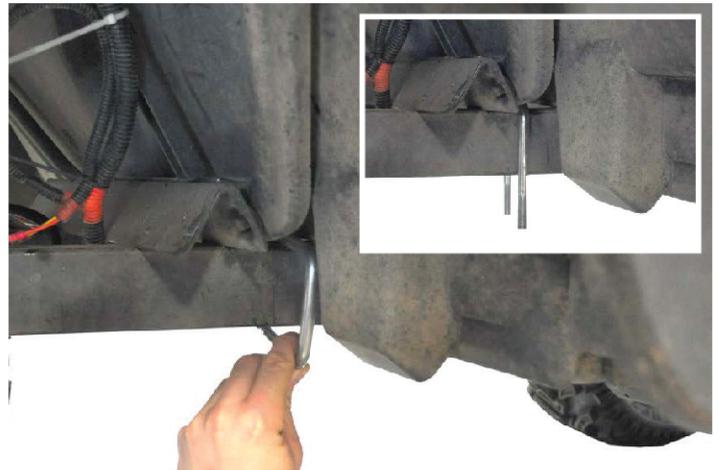

STEP 2:

Slide bracket under frame using angled tabs on top of bracket as a guide. Hand tighten supplied 10mm hardware to hold bracket to U-Bolt.

