

14-008 SIDE STEP BRACKETS INSTALLATION INSTRUCTIONS

WILL FIT YAMAHA® DRIVE®



Brackets

HARDWARE INCLUDED

- (2) Square U-Bolts M10 x 40mm x 104mm
- (2) Square U-Bolt M10 x 68mm x 100mm
- (8) M10 Flat Washers
- (8) M10 Lock Nuts


TOOLS NEEDED

- 17mm Socket
- 17mm Wrench

WARNING: WE RECOMMEND PROFESSIONAL INSTALLATION. IF YOU CHOOSE TO NOT HAVE THIS PRODUCT INSTALLED BY A PROFESSIONAL, WE HIGHLY RECOMMEND THAT YOU EXERCISE CAUTION, CARE, AND PATIENCE WHEN INSTALLING THIS PRODUCT.

STEP 1:

- Place smaller U-Bolt over front of frame as shown.
- Place larger U-Bolt over frame located directly under the front of the battery well.

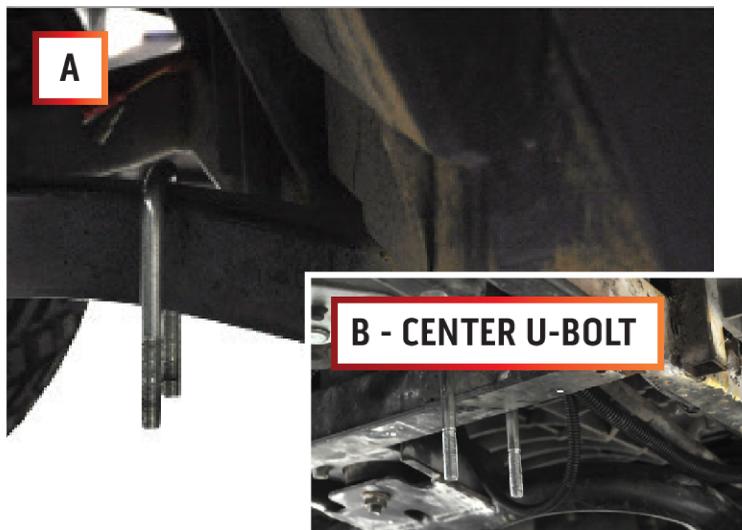

STEP 2:

Place bracket under frame with the tab in picture hooked to top of frame directly behind pedal box.

