



Epic 4F Enclosure Installation Instructions

66179 (Black) & 66180 (Linen)




ITEMS INCLUDED

- Strut Covers (Driver & Passenger Side)
- Front Valence
- Enclosure Panels (Driver Side, Passenger Side, & Rear)

DRIVER SIDE
ENCLOSURE PANEL

FRONT VALENCE

PASSENGER SIDE
ENCLOSURE PANEL

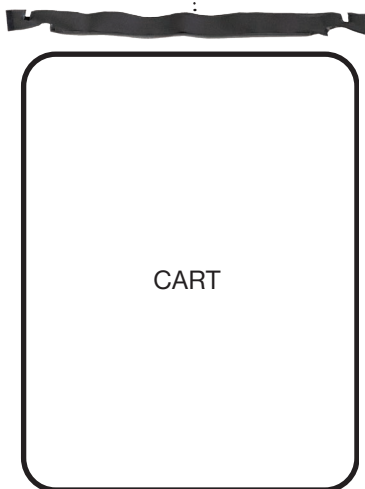

CART



REAR ENCLOSURE
PANEL

**Strut Covers, not pictured*

STEP 1

Remove the bolts that hold the windshield to the front struts of the golf cart, then remove the windshield.



STEP 2

Wrap the sleeves around the front struts so that the cutout for the retention clips is in the proper position.



STEP 3

Engage the smaller zipper so that it wraps snugly around the front struts. The sleeve zipper should be on the backside of the struts.



NOTE: Windshield clip cut-outs are located on top.

STEP 4

Reinstall the windshield using the oem hardware, ensuring the clips are positioned between the cutout in the sleeves.



STEP 5

Align the front valence to the front track and slide the piping into the track. Pull across until it's fully stretched.



STEP 6

For the side enclosure panels, slide the bead of the enclosure panel into the tracks and feed piping down the track. Pull side panel toward rear until the front zipper is even with the zipper on the front strut cover. Repeat on opposite side.



Note: When installing side and rear panels, make sure excess panel is held even with track to avoid binding when sliding panel into track.


STEP 7

Zip the side enclosure panels to the front sleeves as shown below.



STEP 8

For the rear panel, feed the piping of the rear enclosure into the track on the back of the cart. Pull each of the side panels toward the back until they're fully stretched. Align with the zippers on the side panels and connect the rear panel to each of the side panels.

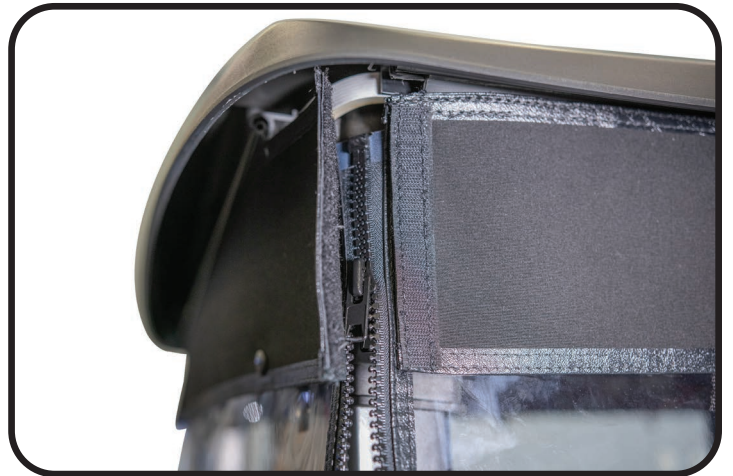

STEP 9

Now that all pieces of the enclosure are installed on the cart, ensure the enclosure panels and front valence are properly aligned and zipped together.

INSTALLATION COMPLETE