

PART# 04-035


CARGO BOX BRACKETS

WILL FIT YAMAHA DRIVE 2

INSTALLATION INSTRUCTIONS

INCLUDED:

2 MAIN BRACKETS
BAGWELL BRACKET
2 CARGO BOX BRACKETS
HARDWARE PACK

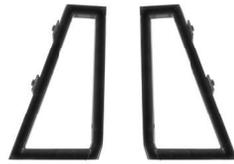

Main Brackets



Bagwell Bracket



Cargo Box Brackets

1
Remove hardware from struts and take off canopy. Retain hardware.



2
Remove hardware from gutters and retain. Remove gutters by sliding them upward.



3

Remove rear struts and lean back cushion. Retain all hardware. You will need it later.



4

Remove rubber covers to access sweater basket bolts. Remove basket and retain hardware. You will need it later.



5

Place front main brackets into golf cart where factory basket was removed. Install hardware using retained hardware. Strut mounting tabs should be on the outside of the cart.



6

A) Attach rear struts to brackets using hardware retained from step 3.
B) Attach seat back to main brackets using hardware retained from Step 3. Reinstall gutters using hardware from Step 2.



A) Remove factory bolts from bagwell and retain.





B) Place brackets in bagwell as shown.



C) Attach bagwell bracket using retained hardware.



Attach cargo box bracket to main bracket using 10mm x 45mm hardware provided, hand tighten.

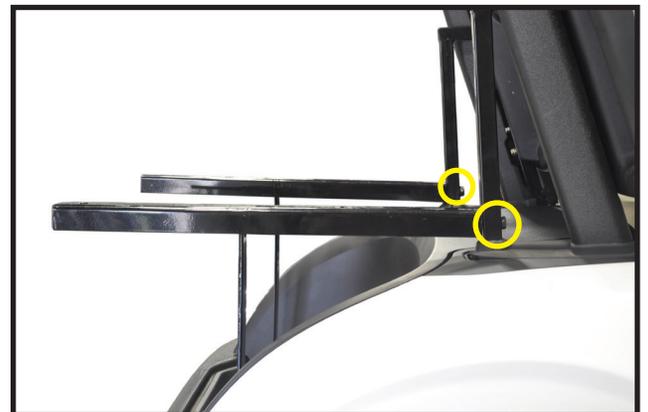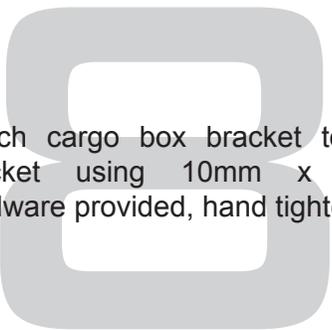

9
Attach cargo box bracket to bagwell bracket using 10mm x 25mm hardware, hand tighten.



10
Reattach canopy using retained hardware from step 1.



11
Attach cargo box using 10mm x 30mm hex head bolts. Once all bolts are in place, tighten all hardware.



INSTALLATION COMPLETE

DRIVE2 CARGO BOX HARDWARE PACK

- (2) 10mm x 45mm Hex Bolts
- (2) 10mm x 25mm Hex Head Bolts
- (4) 10mm x 30mm Hex Head Bolts
- (16) 10mm x 20mm x2mm Flat Washers
- (8) 10mm Anti-Slip Nuts